

Assembly Process



1 Measure and mark the hose to the required length




2 Cut the hose with a sharp cutting tool up to the steel helix wire




3 Cut the steel helix wire. The wire must not protrude past the end of the hose



4 Place the two half shells onto the hose and tighten the side flange bolts. The corrugation inside the muff coupling must align exactly with the corrugation of the hose cover

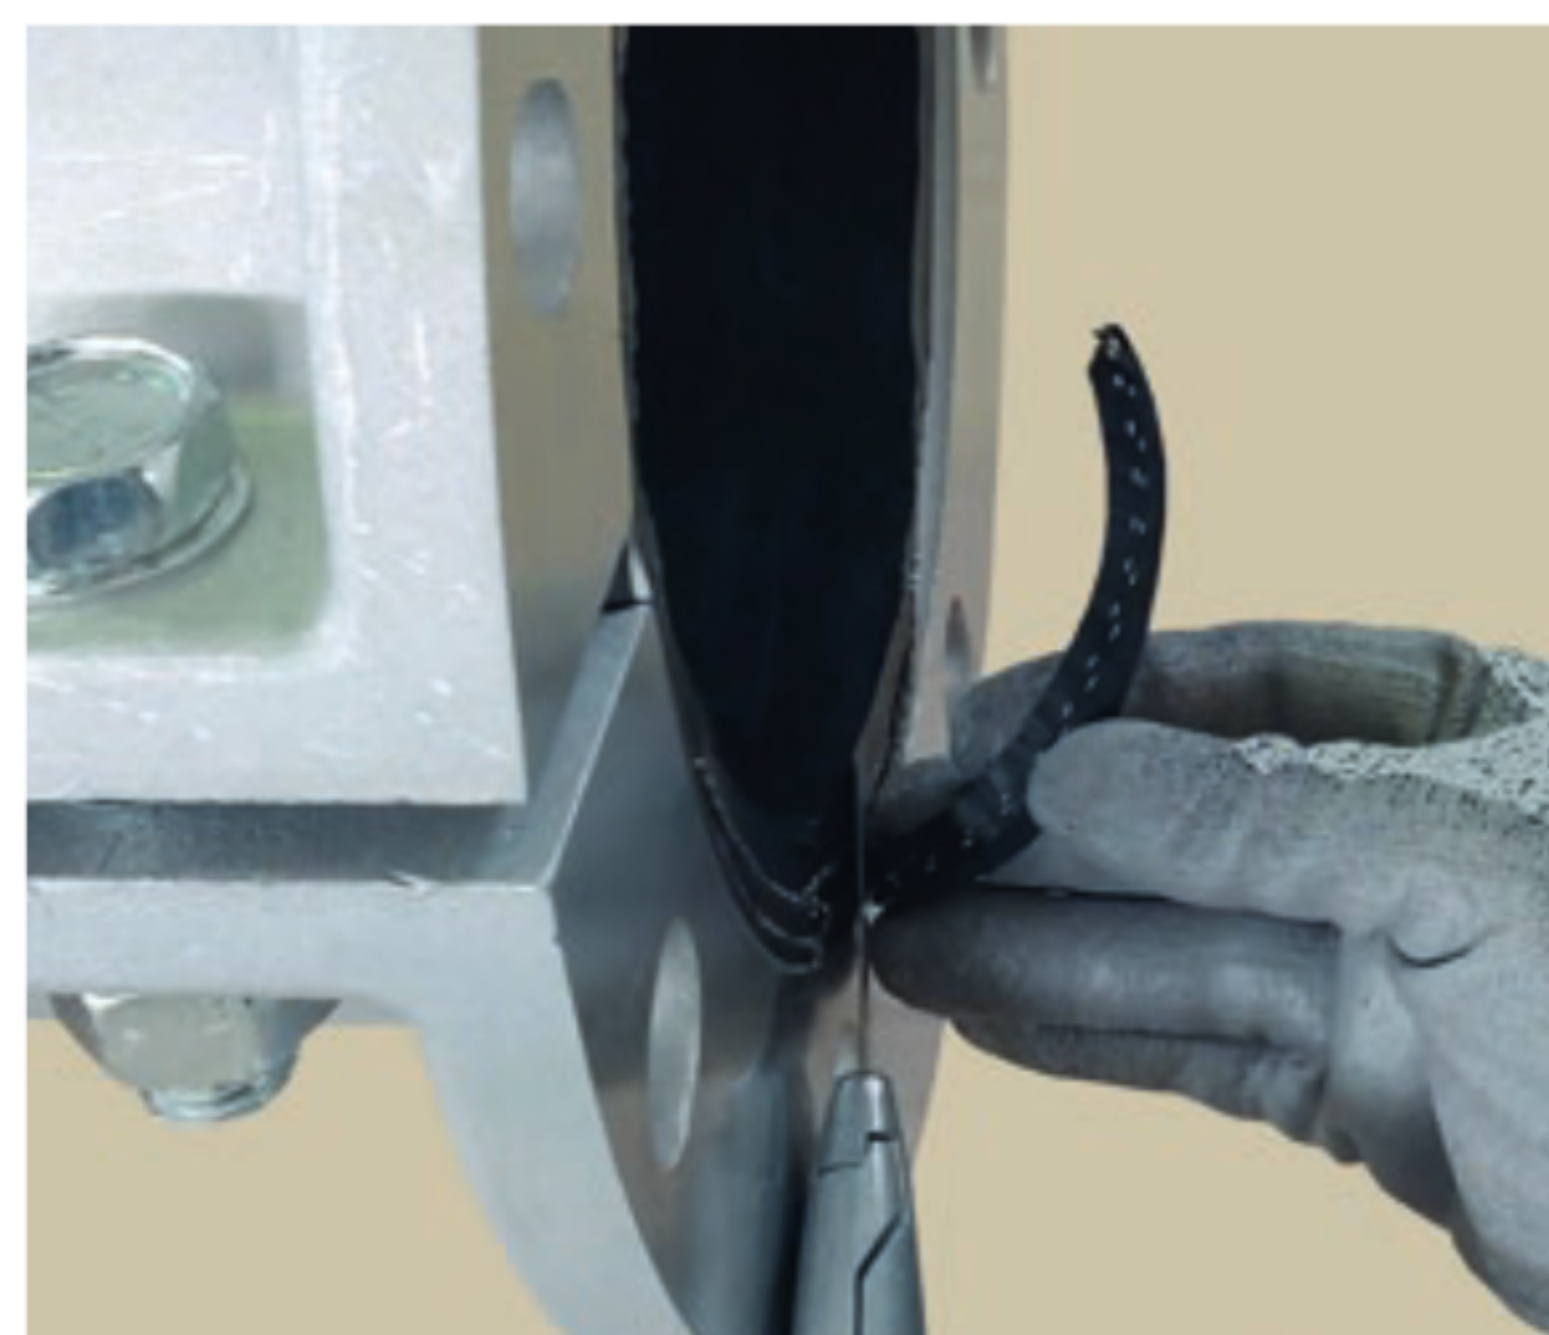

5 Cut off excess hose protruding past the coupling face

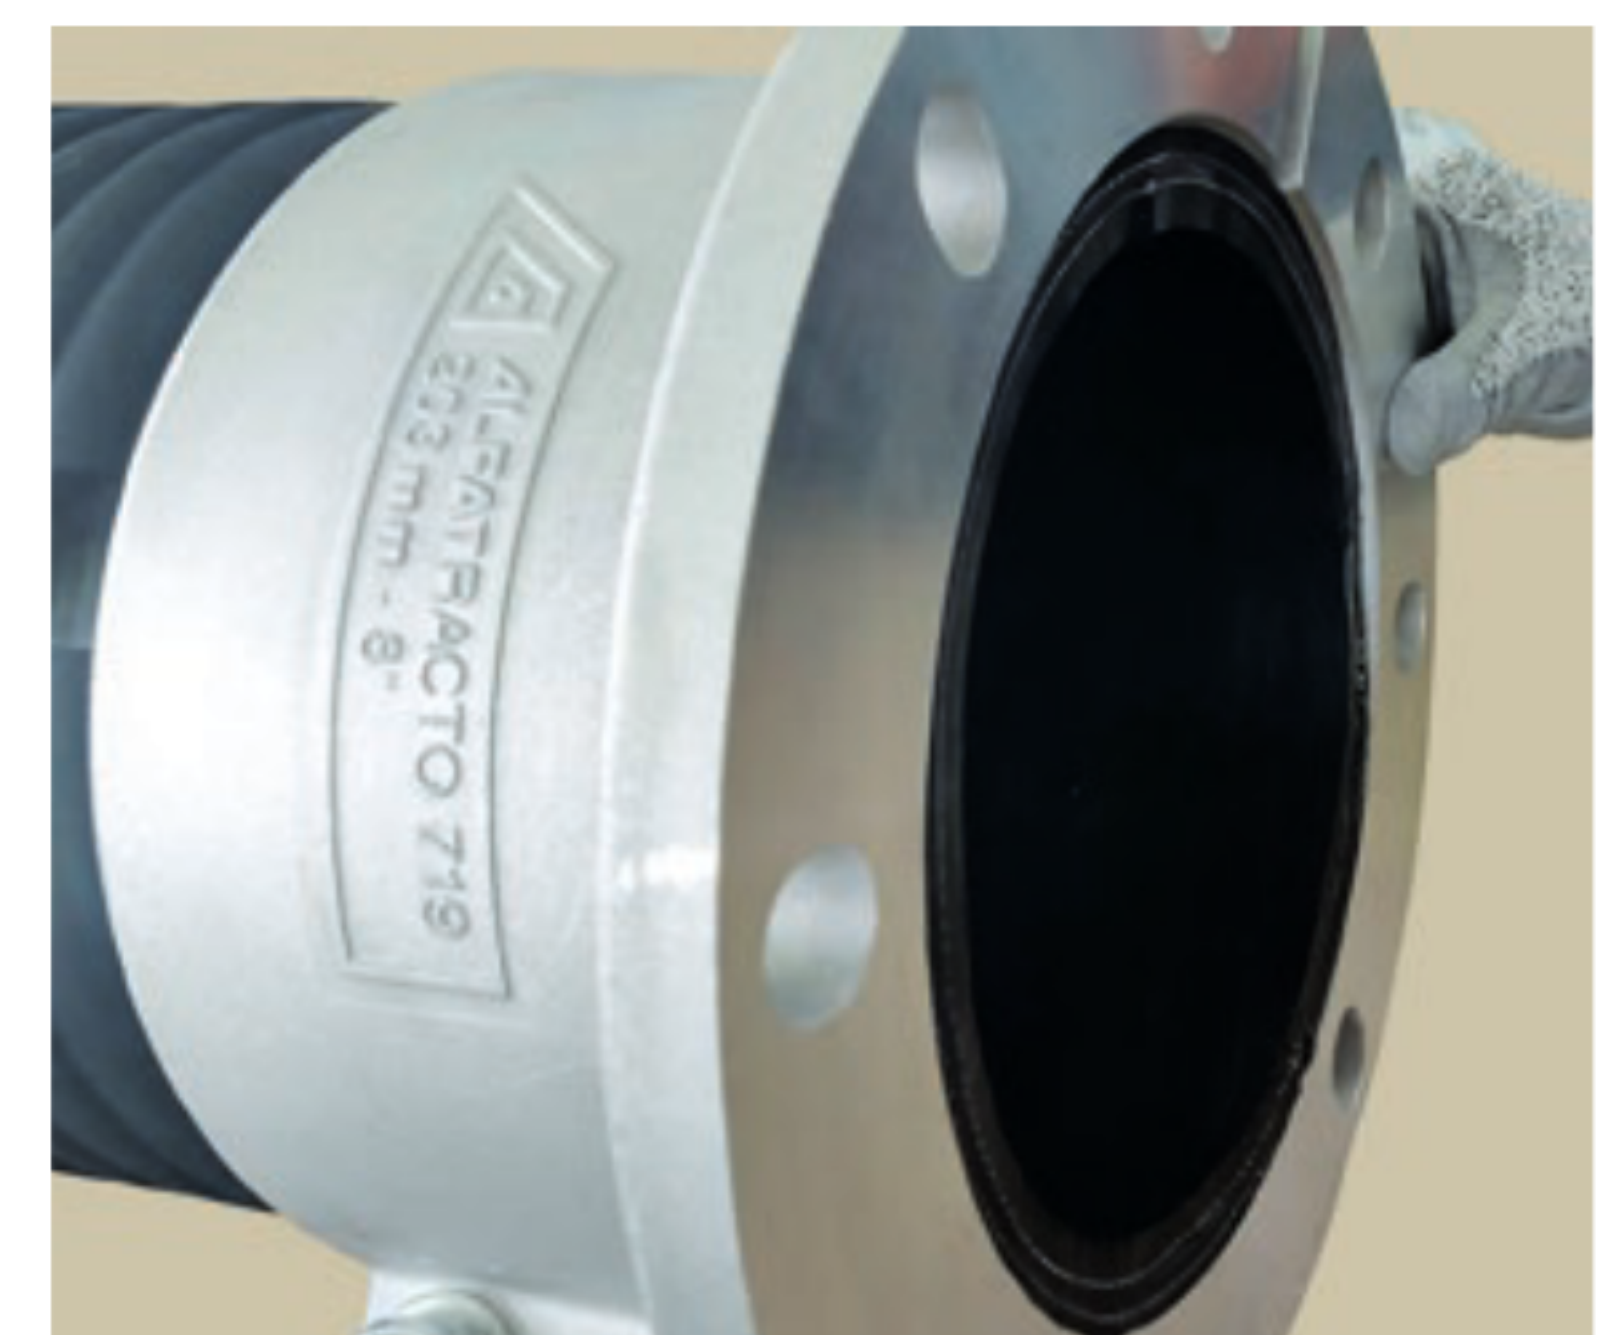

6 The hose assembly is now ready



Because we continually examine ways to improve our products, we reserve the right to alter specifications or discontinue products without prior notice.